
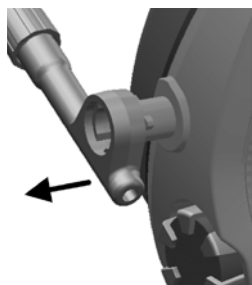


Sordin Supreme T2/X2 SUSPENSION KIT REPLACEMENT

Headband → Neckband, ARC, rear ARC

STEP 1

Turn the cups 90 degrees from normal position to unlock the suspension.

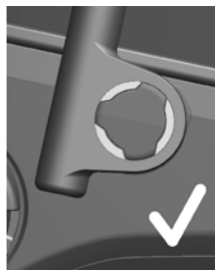


STEP 2

Carefully detach the suspension.

NOTICE! Do not pull hard. No tools needed. Carefully remove the suspension when the triangle shapes on the cups and suspension align.

STEP 3


Detach the cable from the clips or textile padding.

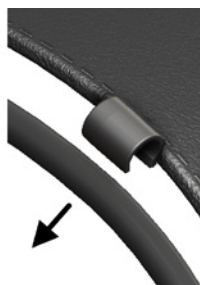

Neckband


STEP 4

Attach the cable to the clips on the neckband suspension.

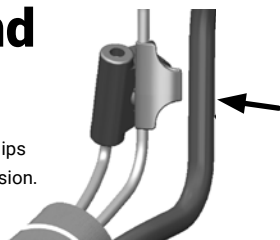

STEP 5

Carefully attach the suspension.

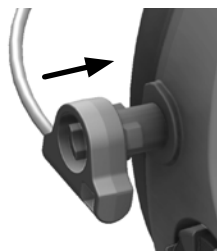

STEP 6


Turn the cups 90 degrees to normal position to lock the suspension.



ARC rails

STEP 4

Carefully attach the suspension.

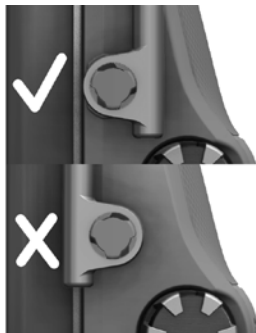

STEP 5

Turn the cups 90 degrees to normal position to lock the suspension.

Rear ARC rails

STEP 4

Press R-ARC clips downwards to attach the suspension to the cups.

